

AIR CLEANER	3-7	FRONT WHEEL/BRAKE/SUSPENSION/STEERING SPECIFICATIONS.....	1-8
AIR CLEANER HOUSING	5-5	FUEL LINE	3-6
AIR SCREW ADJUSTMENT.....	5-13	FUEL SYSTEM SPECIFICATIONS.....	1-6
ALTERNATOR/CAM CHAIN TENSIONER SPECIFICATIONS	1-7	FUEL TANK	2-4
BRAKE PEDAL	13-15	GEARSHIFT LINKAGE	9-16
BRAKE SHOE WEAR	3-15	GENERAL SPECIFICATIONS.....	1-5
BRAKE SYSTEM.....	3-16	HANDLEBAR	12-6
CABLE & HARNESS ROUTING	1-14	IGNITION COIL	14-7
CAM CHAIN TENSIONER	10-6	IGNITION CONTROL MODULE	14-8
CAMSHAFT INSTALLATION	7-18	IGNITION SWITCH	14-9
CAMSHAFT REMOVAL.....	7-6	IGNITION SYSTEM INSPECTION.....	14-5
CARBURETOR ASSEMBLY	5-9	IGNITION SYSTEM SPECIFICATIONS	1-9
CARBURETOR DISASSEMBLY	5-7	IGNITION TIMING	14-10
CARBURETOR INSTALLATION.....	5-11	KICKSTARTER	11-14
CARBURETOR REMOVAL	5-5	LUBRICATION & SEAL POINTS	1-13
CLUTCH	9-6	LUBRICATION SYSTEM DIAGRAM	4-2
CLUTCH SPECIFICATIONS	1-7	LUBRICATION SYSTEM SPECIFICATIONS	1-6
CLUTCH SYSTEM	3-17	MAINTENANCE SCHEDULE	3-4
COMPONENT LOCATION		MODEL IDENTIFICATION	1-2
ALTERNATOR/CAM CHAIN TENSIONER	10-2	NUMBER PLATE	2-5
CLUTCH/GEARSHIFT LINKAGE	9-2	NUTS, BOLTS, FASTENERS	3-19
CRANKSHAFT/TRANSMISSION.....	11-2	OIL PUMP.....	4-4
CYLINDER HEAD/VALVES	7-2	PISTON INSTALLATION	8-8
CYLINDER/PISTON	8-2	PISTON REMOVAL	8-4
ENGINE REMOVAL/INSTALLATION	6-2	REAR BRAKE	13-10
FRONT WHEEL/BRAKE/SUSPENSION/STEERING	12-2	REAR WHEEL	13-5
FUEL SYSTEM	5-2	REAR WHEEL/SUSPENSION SPECIFICATIONS.....	1-8
REAR WHEEL/BRAKE/SUSPENSION	13-2	RIGHT CRANKCASE COVER INSTALLATION	9-19
CRANKCASE ASSEMBLY.....	11-16	RIGHT CRANKCASE COVER REMOVAL.....	9-5
CRANKCASE BREATHER.....	5-14	SEAT.....	2-3
CRANKCASE SEPARATION	11-5	SERVICE INFORMATION	
CRANKCASE/TRANSMISSION/KICKSTARTER SPECIFICATIONS	1-8	ALTERNATOR/CAM CHAIN TENSIONER.....	10-3
CRANKSHAFT	11-6	CLUTCH/GEARSHIFT LINKAGE	9-3
CYLINDER COMPRESSION	7-6	CRANKSHAFT/TRANSMISSION.....	11-3
CYLINDER HEAD	7-7	CYLINDER HEAD/VALVES.....	7-3
CYLINDER HEAD/VALVES SPECIFICATIONS.....	1-6	CYLINDER/PISTON	8-3
CYLINDER INSTALLATION.....	8-8	ELECTRICAL SYSTEM	14-3
CYLINDER REMOVAL	8-4	ENGINE REMOVAL/INSTALLATION.....	6-3
CYLINDER/PISTON INSPECTION.....	8-5	FRAME/BODY PANELS/EXHAUST SYSTEM	2-2
CYLINDER/PISTON SPECIFICATIONS	1-7	FRONT WHEEL/BRAKE/SUSPENSION/STEERING	12-3
DRIVE CHAIN.....	3-13	FUEL SYSTEM	5-3
DRIVE CHAIN SLIDER	3-15	LUBRICATION SYSTEM	4-3
EMISSION CONTROL SYSTEMS	1-17	MAINTENANCE	3-2
ENGINE IDLE SPEED.....	3-13	REAR WHEEL/BRAKE/SUSPENSION.....	13-3
ENGINE INSTALLATION.....	6-6	SERVICE RULES	1-2
ENGINE OIL	3-10	SHOCK ABSORBER.....	13-12
ENGINE OIL CENTRIFUGAL FILTER	3-12	SIDE STAND	2-6,3-17
ENGINE OIL STRAINER SCREEN.....	3-12	SPARK ARRESTER	3-19
ENGINE REMOVAL	6-4	SPARK PLUG	3-8
ENGINE STOP SWITCH	14-8	STATOR/FLYWHEEL INSTALLATION	10-8
EXHAUST SYSTEM	2-5	STEERING HEAD BEARINGS	3-20
FLYWHEEL/STATOR REMOVAL	10-4	STEERING STEM.....	12-18
FORK	12-15	SUSPENSION	3-18
FRONT BRAKE.....	12-13	SWINGARM	13-14
FRONT FENDER	2-5	SYSTEM DIAGRAM	
FRONT WHEEL	12-8	ELECTRICAL SYSTEM	14-2
		THROTTLE OPERATION	3-6
		TORQUE VALUES	1-10

INDEX

TRANSMISSION.....	11-8	FRAME/BODY PANELS/EXHAUST SYSTEM.....	2-2
TRUBLESHOOTING		FRONT WHEEL/BRAKE/SUSPENSION/	
ALTERNATOR/CAM CHAIN TENSIONER.....	10-3	STEERING.....	12-5,13-4
CLUTCH/GEARSHIFT LINKAGE.....	9-4	FUEL SYSTEM.....	5-4
CRANKSHAFT/TRANSMISSION.....	11-4	LUBRICATION SYSTEM.....	4-3
CYLINDER HEAD/VALVES.....	7-5	POOR HANDLING.....	16-6
CYLINDER/PISTON.....	8-3	POOR PERFORMANCE AT HIGH SPEED.....	16-5
ELECTRICAL SYSTEM.....	14-4	POOR PERFORMANCE AT LOW AND IDLE SPEED.....	16-5
ENGINE DOES NOT START OR		VALVE CLEARANCE.....	3-9
IS HARD TO START.....	16-2	WHEELS/TIRES.....	3-20
ENGINE LACKS POWER.....	16-3	WIRING DIAGRAM.....	15-2